

 
WARNING

This stylus is only intended for mounting on an Ortofon Concorde Music Cartridge and must not be used for any other purposes.

To avoid stylus damage please keep the stylus guard on the stylus when mounting or dismounting the cartridge.

Do not use alcohol, solvents, or any other cleaning fluids to clean the product as this may damage it.

**FOR SUPPORT PLEASE GO TO:
www.ortofon.com/support**

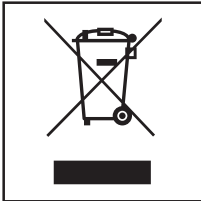

Ortofon A/S
Stavangervej 9
DK-4900 Nakskov
Denmark
www.ortofon.com

5-800176-12 Rev. 08



 
Scan the QR code
for more information.

*STYLUS
CONCORDE
MUSIC*
USERGUIDE

ortofon


STYLUS MOUNTING

The stylus is easily mounted or dismounted by holding the stylus as shown below and gently moved towards or away from the cartridge.

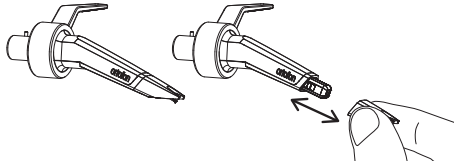

STYLUS GUARD

 Remove the stylus guard before use by holding each side of the guard with your fingers and gently moving it in the opposite direction of the stylus.

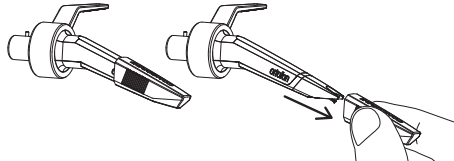

TRACKING FORCE

Please set the tracking force to 1.8 g to ensure optimal tracking and sound quality.

STYLUS CARE AND MAINTENANCE

Remove dust from the stylus regularly by using a stylus brush to obtain optimal sound reproduction.

STYLUS UPGRADE

All Concorde Music cartridges are compatible with all Concorde Music styli. For instance, the Concorde Music Red cartridge is upgradeable all the way up to the Black LVB 250 model, simply by exchanging the stylus.